



# Equipment Specification

**BRISTOL**
**BRISTOL 2 litre 1947-48**

Ammeter	1947-48	*36041B	Starting motor	1947-48	25006A/D	SWITCHES -continued		
Battery	1947-48	SG11A	Steering column control	1947-48	*32750A/B	Windshield wiper	1947	*31128A
Coil, ignition	1947-48	*45012A/D	<b>SWITCHES</b>			" Later	1947-48	31154D
Control box	1947-48	*37032A/B	Choke	1947-48	*31145A	Trafficators	1947-48	*54018D
Distributor	1947-48	40109A	Dipper	1947-48	31284A	Warning light	1947-48	318604
Generator	1947-48	*22446A/B	Heater or Fan	1947	*31156A	<b>Windshield wipers</b>		
Horn			" Later	1947-48	31154A	Motor	1947-48	*75068K
Low note	1947-48	*69021A	Ignition and lighting	1947-48	*34047B	Wheelbox	1947-48	72560A/K
High note	1947-48	*69022A	Panel	1947-48	78225A	Crosshead and rack assy.	1947-48	738499
<b>LAMPS</b>			Knob		*768507	Outer casing		
Head	1947-48	*50612B/D	Reverse lamp	1947-48	*31077D	Motor to wheelbox	1947-48	*739832
Number plate illumination	1947-48	53093E	Roof lamp	1947-48	*159350	Wheelbox to wheelbox	1947-48	*739971
Side	1947-48	52070A	Solenoid, starting motor	1947-48	76022B	3", offside wheelbox	1947-48	740031
Stop tail and reverse	1947-48	*53094F	Solenoid operating	1947-48	*31071A	Grommet, wheelbox	1947-48	734458
Mirror	1947-48	*580651	Stop lamp	1947-48	31281B	Arm, left hand	1947-48	*737452
			Spring		—	" right hand	1947-48	*737451
			Trafficator	1947-48	031046	Blade	1947-48	727707

**BRISTOL '400' 1949-50**

Ammeter	1949-50	*36041B	<b>LAMPS -continued</b>			<b>SWITCHES -continued</b>		
Battery	1949	SG9A	Head, Export Europe			Trafficator	1949-50	031046
	1950	GT9A	(not France)			Windshield wiper	1949-50	31201B
Coil, ignition	1949-50	*45012A/D	(R.H. and L.H.)			Knob	—	*314691
Control box	1949-50	37065E	Number plate illumination	1949-50	*B50445K	Terminal block	1949-50	300990
Distributor	1949	40109B	Side	1949-50	53093E	Trafficators	1949-50	*54039A
"	Later	1949-50	Stop tail and reverse	1949-50	52070A	Warning light	1949-50	318604
Generator	1949-50	*22446A	Starting motor	1949-50	25006A/D	Windshield wipers		
Horn	Later	1950	Steering column control	1949-50	*32750B	Motor	1949-50	*75068K
Low note	1949	*69021A	<b>SWITCHES</b>			Wheelbox	1949-50	72560A/K
High note	1950	*69011F	Dipper	1949-50	31284A	Crosshead and rack assy.		
"	1949	*69022A	Ignition and lighting	1949-50	*344874	Cut to 47°	1949-50	738499
<b>LAMPS</b>			Panel	1949-50	78225A	Outer casing		
Head, Home			Knob	—	*768507	Motor to wheelbox	1949-50	*739832
R.H.D., dip left (L.H.)	1949-50	*50445K	Reverse lamp	1949-50	*31077D	Wheelbox to wheelbox	1949-50	*739971
non-dip (R.H.)	1949-50	*50446K	Roof lamp	1949-50	*359350	3", offside wheelbox	1949-50	740031
Head, Export			Solenoid, starting motor	1949-50	76022B	Grommet, wheelbox	1949-50	734458
R.H.D., dip left	1949-50	*50445K	Solenoid operating	1949-50	*31071A	Arm, left hand	1949-50	*737452
L.H.D., dip right	1949-50	*A50445K	Stop lamp	1949-50	31281B	" right hand	1949-50	*737451
			Spring	—	315543	Blade	1949-50	727707

**BRISTOL '401' 1949-53**

Ammeter	1949-50	36070A	<b>LAMPS -continued</b>			<b>SWITCHES -continued</b>		
Battery	1949-53	36120A	Head, Export France	1951-53	51092A	Trafficator	1949-50	031046
Coil, ignition	1949-53	GT9A	Number plate interior parts	1949-53	553780	Windshield wiper	1949-50	31201B
Control box	1949-50	*45012A/D	Stop tail and reverse	1949-50	*53094E	Knob	—	*314691
Distributor	1949-53	37065E	Petrol reserve valve	1949-53	78016A	Terminal block	1949-50	300990
"	Later	1949-53	Relay, foglamp	1949-53	33093A	Trafficators	1949-50	*54039A
"	Later	1949-50	Relay, horn	1949-53	*33116B	Warning light	1949-50	318604
"	1951-52	40109D	Starting motor	1949-50	25006A/D	Windshield wipers		
Generator	1949-50	*22446A	Steering column control	1949-50	*32750B	Motor	1949-50	*75068K
Horn	Later	1950	<b>SWITCHES</b>			Wheelbox	1949-50	72560A/K
Low note	1949	*69021A	Dipper	1949-50	31284A	Crosshead and rack assy.		
High note	1950	*69011F	Foglamp	1949-50	31154A	Cut to 47°	1949-50	738499
"	1949	*69022A	Heater or fan	1949-50	78241A	Outer casing		
<b>LAMPS</b>			Ignition and lighting	1949	*34051A	Motor to wheelbox	1949-50	*739832
Fog and side			Panel	1951	*34081A	Wheelbox to wheelbox	1949-50	*739971
Head, Home			Knob	—	*78243A	3", offside wheelbox	1949-50	740031
R.H.D., dip left (L.H.)	1949-50	*50445K	Reverse lamp	1949-50	*31077D	Grommet, wheelbox	1949-50	734458
non-dip (R.H.)	1949-50	*50446K	Roof lamp	1949-50	*359350	Arm, left hand	1949-50	*737452
R.H.D., dip left	1949-52	50920A	Solenoid, starting motor	1949-50	76022B	" right hand	1949-50	*737451
(L.H. and R.H.) ditto	1953	*51334A	Solenoid operating	1949-50	*76411D	Blade	1949-50	727707
Head, Export			Stop lamp	1949-50	31281B			
R.H.D., dip left	1949-50	*50445K	Spring	—	315543			
"	1951-52	50920A	Trafficator	1949-50	031046			
L.H.D., dip right	1953	*51334A	Windshield wiper	1949-50	31154A			
Head, Export Europe (not France)	1949-50	*A50445K						

**BRISTOL '403' 1954**

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954	36120A	<b>LAMPS -continued</b>			<b>SWITCHES -continued</b>		
Battery	1954	GT9A	Head, Export France	1954	51591A	Trafficator	1954	031046
Coil, ignition	1954	*45012A/D	Number plate interior parts	1954	553780	Windshield wiper	1954	31154A
Control box	1954	37065E	Side	1954	*52205A/B	Trafficators	1954	*54039A
Distributor	1954	40109A	Stop tail and reverse	1954	53201B	Warning lights	1954	318604
"	1955	*40345A	Petrol reserve valve	1954	53201B	Ignition	1954	318604
Generator	1954	22258D	Starting motor	1954	25026A/B	Main beam	1954	318604
Horn			Suppressor	1954	78120A	Petrol reserve	1954	318604
Low note	1954	*69011F	<b>SWITCHES</b>			Windshield wipers		
High note	1954	*69012F	Dipper	1954	31284A	Motor	1954	75143A
Horn relay	1954	*33116B	Fog and driving lamp (when fitted)	1954	31154A	Wheelbox	1954	72560A/K
<b>LAMPS</b>	</td							